

Nyestriasztó felhasználói kézikönyv alatt

Használati utasítás




Egy apró nyestriasztó védi az autót az egész család számára.

BEVEZETÉS

Köszönjük, hogy megvásárolta a gépkocsi nyestriasztót. Annak érdekében, hogy gondoskodjon a megfelelő használatról és a problémamentes működésről, kérjük olvassa el az alábbiakat a használat előtt. A készülék ultrahangot bocsát ki, amelynek célja a rágcsálók halló- és központi idegrendszerének megzavarása. Úgy tervezték, hogy megvédje a járműveket és a motorkerékpárokat az elektromos vezetékek károsító hatásától. Amikor a tél jön, a motortér vonzza az állatokat, hogy életben maradjanak. Az ebből az eszközből származó hanghullámok a kártevő állatokat, mint az egereket, patkányokat, a vakondot és a mókust távol tartják.

1

A termék megjelenése

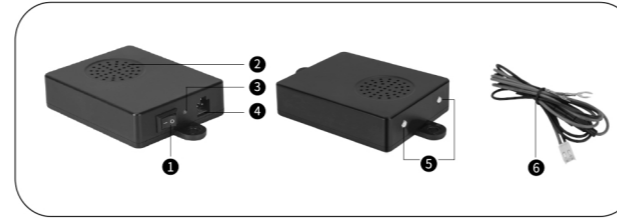

- 1 Be ki
- 2 Ultrahangos hangszóró
- 3 Teljesítményjelző
- 4 Kikötő
- 5 Funkciójelző
- 6 Kábel

LEÍRÁS

- 1) Ultrahangos frekvencia: 22-45 kHz (folyamatos változó)
- 2) Áramellátás: 12V
- 3) Áramfelvétel: 50mA - 70mA
- 4) Áramfelvétel: 0,6 W

2

BEÉPÍTÉS

Kezdje a munkát: A piros és a fehér fény 3 másodpercig világít. A gép elkezd dolgozni. Ultrahangos és fehér villogó fényt bocsát ki.

Működési módok: Gyors, gyakori villogás 20 másodpercig, lassú villogás 40 másodpercig, gyors villogás 40 másodpercig, lassú 40 másodpercig – gyors 40 másodpercig, lassú villogás 60 másodpercig – gyors 60 másodpercig, lassú villogás 120 másodpercig.

(A piros fény jelzi a lassú frekvenciát, a zöld fény pedig jelzi a gyors frekvencia) A fehér fény 10 másodpercig villog mindhárom sebességnél: gyors, közép és lassú.

Működés leállítása: Ha rezgő jel van (járművek indításánál), a piros fény villog, a készülék leáll. 90 másodperccel a rezgésjelzés leállítása után (járművek leállnak), újra működik.

3



ALKALMAZÁS

A járművek 12V-os akkumulátorral vannak ellátva autókhoz, motorkerékpárokhoz, traktorokhoz, tehergépkocsikhoz stb. Nem javasoljuk, hogy a készüléket nedves helyekre telepítse, vagy a készülékbe behatoljon. A sérülések elkerülése érdekében óvja a készüléket a szennyeződésektől és egyéb behatásoktól.

4

FIGYELEM

- 1) A beépített rezgésérzékelő normál állapotban hangot ad ki.
- 2) Ha a motortér a telepítés után is rágcsálókról tanúskodik. Kérjük, ellenőrizze, hogy a jelzés be van-e kapcsolva. Ezután parkolja le autóját hulladék mellett vagy vidéki területeken. A legfontosabb szempont az, hogy lépjen kapcsolatba velünk amint lehetséges, hogy segítsük kezelni a problémát.

5

Underhood Pest Repeller

User Manual




A TINY AUTO PEST REPELLENT CAN PROTECT YOUR CAR AND SAFETY FOR WHOLE YOUR FAMILY.

INTRODUCTION

Dear customers, thank you very much for purchasing our products. Please read this user manual carefully before using this product. If you have any questions about your order or this product, please feel free to contact us. The device emits ultrasound aimed to disturb auditory and central nervous system of rodents. It is designed to protect vehicles and motorcycles from harmful action of rodents who gnaw electric wires. When winter comes and sources are exhausted outside, the engine compartment would attract animals to live in. The sound waves from this device will chase pest animal like mice, rat, mole even squirrel under hood.

1

PRODUCT APPEARANCE

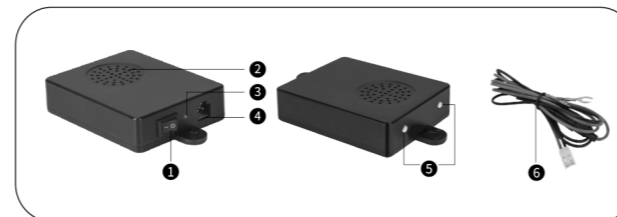

- 1 ON/OFF
- 2 Ultrasonic speaker
- 3 Power indicator
- 4 Port
- 5 Function indicator
- 6 Cable

SPECIFICATION

- 1) Ultrasonic frequency: 22-45kHz
- 2) Power supply: DC12V
- 3) Current: 50mA - 70mA
- 4) Power consumption: 0.6W

2

INSTALLATION

- 1) Connect the two connectors with the car battery, black lead/cathode(-), red lead/anode(+).
- 2) Fasten the unit to other cables with included nylon cable ties.
- 3) Turn on the power and the switch. The power indicator (red) and function indicator (white light) will remain for 3 seconds. The machine will start to work and emit ultrasound.

Working modes:

Frequency sweeping quickly for 20 seconds-frequency sweeping slowly for 40 seconds-quickly for 40 seconds-slowly for 40 seconds-quickly for 40 seconds-slowly for 60 seconds-quickly for 60 seconds-slowly for 120 seconds, which circulates in an orderly way.

• Frequency sweeping slowly:

Power indicator remains red and function indicator flashes slowly .

• Frequency sweeping quickly:

Power indicator remains green and function indicator flashes quickly.

Stop working:

When there is a vibration signal triggers circuit (vehicles start), power indicator flashes in red, the unit will stop working. 90 seconds after vibration signal stops (vehicles stop), it will work again.

3



APPLICATION

The vehicles are powered with 12V battery for cars, motorcycle, tractor, truck etc. We do not recommend to install the unit in humid areas or allow penetration of water in the machine. Be aware the device from dust, dirt or bumps to avoid damage.

4

ATTENTION

- 1) Included vibrating sensor makes sound when shaking the unit, which is in normal condition.
- 2) Overcurrent might blow a fuse, if the unit (all indicators) don't work when it connects the power and switches on, please check the fuse in red lead, change it when it's broken (125W 500mA 250V).
- 3) Improper installation may cause short circuit or electric shock. We recommend to install it in service stations RAR authorized to avoid wrong installation.
- 4) If engine compartment also found evidence of rodents after install. Please park your car besides the garbage, and check the power indicator and obey ATTENTION (2) .
- 5) Then THE MOST IMPORTANT THING is that contact us ASAP to help you deal with problem.

5