

Temporizadores de Precalentamiento

Pre-Heating Timers

Temporisateurs de Prechauffage




Temp. de Pre-Postcalentamiento

Pre-Post Heating Timer

Temp. de Pre-Post Chauffage

DESCRIPCIÓN	CÓDIGO	REFERENCIA	WV	VOLTS	TEMP.	CONEXIONES
Temp. de Pre-Postcalentamiento <i>Pre-Post Heating Timer</i> <i>Temp. de Pre-Post Chauffage</i>	RENAULT: R19,R21,CLIO, SAFRANE					
	03413	TRM/12-12 TRMA/12-12	C	12 V	7"	
	EQUIVALENTE TRMA/12-12					
	RENAULT					
	03770	TRMB/12-12	C	12 V	7"	
	RENAULT: LAGUNA					
	03758	TRMC/12-12	C	12 V	2"	
	RENAULT					
	03171	TRME/12-12	C	12 V	4"	
	RENAULT: MEGANE					
	03759	TRMF/12-12	C	12 V	4"	
	RENAULT: R19TD					
	03084	TRMI/12-12	C	12 V	4"	
	RENAULT					
	03053	TRMK/12-12	C	12 V	7"	
RENAULT						
03172	TRML/12-12	C	12 V	7"		
RENAULT: CLIO, R19 D						
03085	TRMP/12-12	C	12 V	7"		
RENAULT: CLIO 1.9D						
03057	TRMR/12-12	C	12 V	4"		
RENAULT: MASTER 2.5D						
03147	TRMS/12-12	C	12 V	7"		

Terminales / Terminals / Bornes

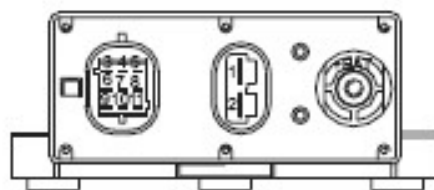

+BAT	Boma 30
1 Bougie 1 y 2	Boma 87
2 Bougie 3 y 4	Boma 87b
3 ALF / S2	Válvula Comienzo Inyección
4 PC	Interruptor Plena Carga
5 CTN	Termointerruptor
6 +APC	Boma 15
7 DEM	Boma 50
8 TEM	Lámpara
9 EVKSB/ S1	Válvula Eléct. Arranque en frío
10 -BAT	Boma 31
11 CLIM	Aire Acondicionado