

## Temporizadores de Precalentamiento


Pre-Heating Timers  
Temporisateurs de Prechauffage



Temp. de Pre-Postcalentamiento  
*Pre-Post Heating Timer*  
*Temp. de Pre-Post Chauffage*

DESCRIPCIÓN	CÓDIGO	REFERENCIA	WV	VOLTS	TEMP.	CONEXIONES	
Temp. de Pre-Postcalentamiento <i>Pre-Post Heating Timer</i> <i>Temp. de Pre-Post Chauffage</i>	RENAULT: R19, R21, CLIO, SAFRANE						
	03413	TRM/12-12 TRMA/12-12	C	12 V	7"		
	EQUIVALENTE TRMA/12-12						
	RENAULT						
	03770	TRMB/12-12	C	12 V	7"		
	RENAULT: LAGUNA						
	03758	TRMC/12-12	C	12 V	2"		
	RENAULT						
	03171	TRME/12-12	C	12 V	4"		
	RENAULT: MEGANE						
	03759	TRMF/12-12	C	12 V	4"		
	RENAULT: R19TD						
	03084	TRMI/12-12	C	12 V	4"		
	RENAULT						
	03053	TRMK/12-12	C	12 V	7"		
RENAULT							
03172	TRML/12-12	C	12 V	7"			
RENAULT: CLIO, R19 D							
03085	TRMP/12-12	C	12 V	7"			
RENAULT: CLIO 1.9D							
03057	TRMR/12-12	C	12 V	4"			
RENAULT: MASTER 2.5D							
03147	TRMS/12-12	C	12 V	7"			

### Terminales / Terminals / Bornes

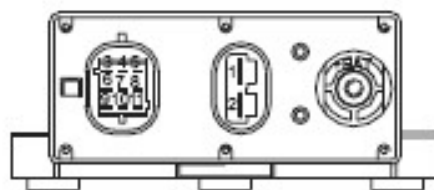

+BAT	Boma 30
1 Bougie 1 y 2	Boma 87
2 Bougie 3 y 4	Boma 87b
3 ALF / S2	Válvula Comienzo Inyección
4 PC	Interruptor Plena Carga
5 CTN	Termointerruptor
6 +APC	Boma 15
7 DEM	Boma 50
8 TEM	Lámpara
9 EVKSB/ S1	Válvula Eléct. Arranque en frío
10 -BAT	Boma 31
11 CLIM	Aire Acondicionado