

Temporizadores de Precalentamiento


Pre-Heating Timers
Temporisateurs de Prechauffage



Temp. de Pre-Postcalentamiento
Pre-Post Heating Timer
Temp. de Pre-Post Chauffage

DESCRIPCIÓN	CÓDIGO	REFERENCIA	WV	VOLTS	TEMP.	CONEXIONES
Temp. de Pre-Postcalentamiento <i>Pre-Post Heating Timer</i> <i>Temp. de Pre-Post Chauffage</i>	RENAULT: R19, R21, CLIO, SAFRANE					
	03413	TRM/12-12 TRMA/12-12	C	12 V	7"	
	EQUIVALENTE TRMA/12-12					
	RENAULT					
	03770	TRMB/12-12	C	12 V	7"	
	RENAULT: LAGUNA					
	03758	TRMC/12-12	C	12 V	2"	
	RENAULT					
	03171	TRME/12-12	C	12 V	4"	
	RENAULT: MEGANE					
	03759	TRMF/12-12	C	12 V	4"	
	RENAULT: R19TD					
	03084	TRMI/12-12	C	12 V	4"	
	RENAULT					
03053	TRMK/12-12	C	12 V	7"		
RENAULT						
03172	TRML/12-12	C	12 V	7"		
RENAULT: CLIO, R19 D						
03085	TRMP/12-12	C	12 V	7"		
RENAULT: CLIO 1.9D						
03057	TRMR/12-12	C	12 V	4"		
RENAULT: MASTER 2.5D						
03147	TRMS/12-12	C	12 V	7"		

Terminales / Terminals / Bomes

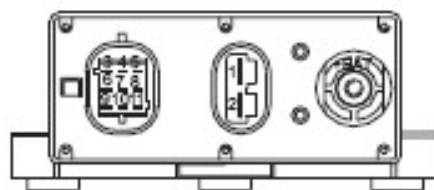

- | | |
|----------------|---------------------------------|
| +BAT | Boma 30 |
| 1 Bougie 1 y 2 | Boma 87 |
| 2 Bougie 3 y 4 | Boma 87b |
| 3 ALF / S2 | Válvula Comienzo Inyección |
| 4 PC | Interruptor Plena Carga |
| 5 CTN | Termointerruptor |
| 6 +APC | Boma 15 |
| 7 DEM | Boma 50 |
| 8 TEM | Lámpara |
| 9 EVKSB/ S1 | Válvula Eléct. Arranque en frío |
| 10 -BAT | Boma 31 |
| 11 CLIM | Aire Acondicionado |